
# CONFLUENCE PARSONS TABLE INSTALLATION INSTRUCTIONS




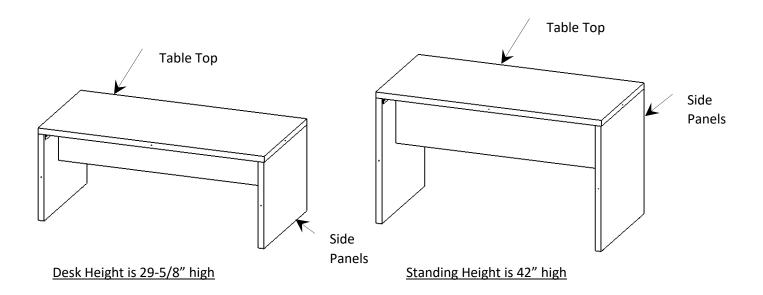

GRADE 1 PARSONS – 1-1/8" Thick Table Top and Side Panels GRADE 2 PARSONS – 1-7/8" Thick Table Top and Side Panels



#### STRETCHER PRE-ASSEMBLY (Quantity of 2 per Parson's Table)

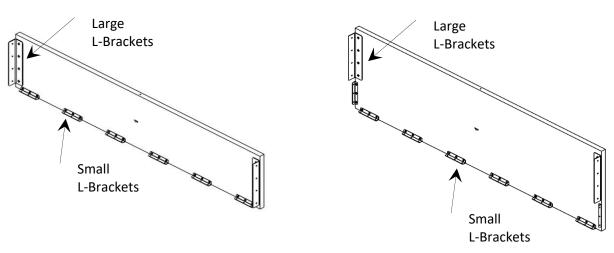

Desk Height Stretcher is 12" high


Standing Height Stretcher is 18" high

1. Pre-Assemble Brackets as shown and using Table 1 as reference for bracket quantity. Locate brackets using pre-drilled pilot holes and secure with #8 x 1" L screws.

TABLE 1						
LENGTH	Up to 66"		72" to 96"		102" to 120"	
BRACKET	DESK HT	STANDING HT	DESK HT	STANDING HT	DESK HT	STANDING HT
SMALL	4	6	6	8	NOT USED	2
LARGE	2	2	2	2	8	8

Each small bracket uses 3 screws and Large Brackets uses 4 screws.



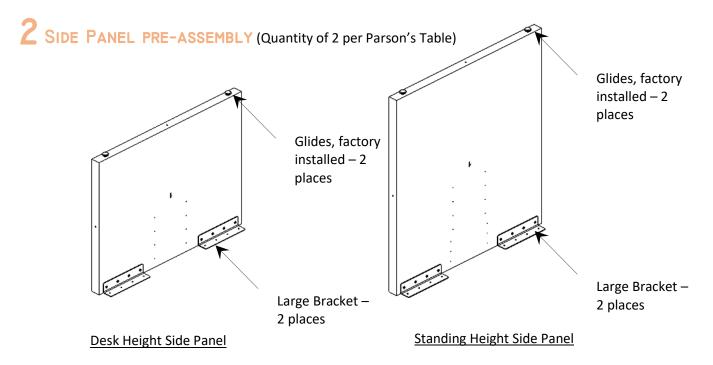


1. Pre-Assemble Large Brackets as shown using pre-drilled pilot holes and secure with #8 x 1" L screws (4 screws per bracket).

# NOTE: Small Brackets mounted vertically are only for Standing Height Tables. Desk Height uses only Large Brackets. Refer to Step 1. Stretcher, Preassembled (See Step 1)

1. Assemble Stretcher as shown using pre-drilled pilot holes on the Table Top. Secure with #8  $\times$  1" L screws. Do not tighten screws at this time to allow movement for final adjustments.


# 4 SIDE PANEL TO TABLE ASSEMBLY

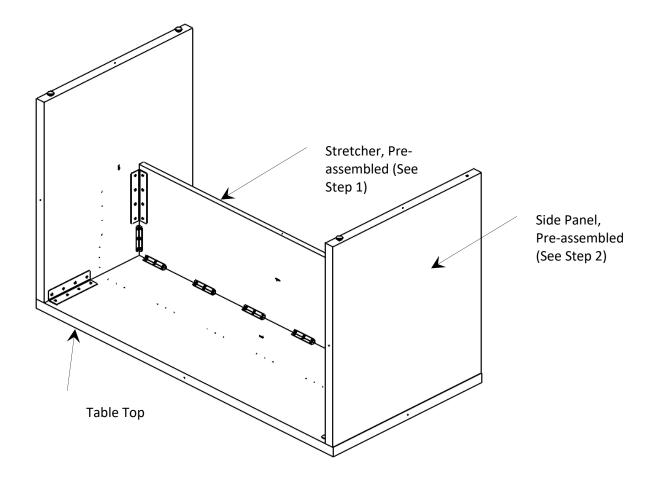

1. Position Side Panel as shown using pre-drilled pilot holes on the Table Top. Secure with #8  $\times$  1" L screws. Do not tighten screws at this time to allow movement for final adjustments.



# 5 FINAL ASSEMBLY

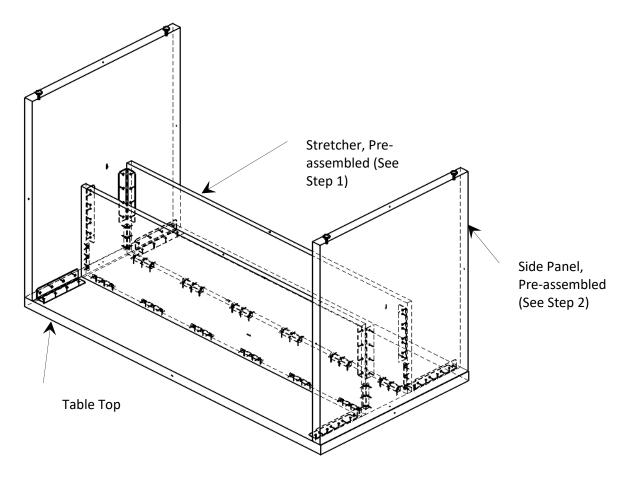

1. Position Stretcher as shown using pre-drilled pilot holes on the Table Top. Secure with #8 x 1" L screws. Align Panels and tighten all screws at this time.

